



FLiP *PHONE ACT*
user guide

Version 1.0

FLIP KIT

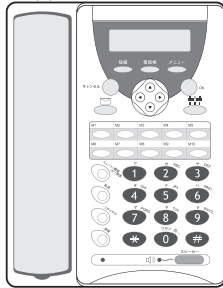


FLIP Phone Terminal

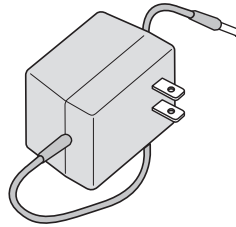

AC/DC Power Supply





LAN Cable

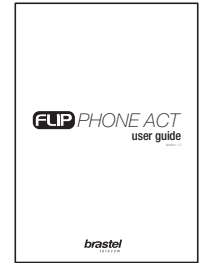

User Guide

SPECIFICATION

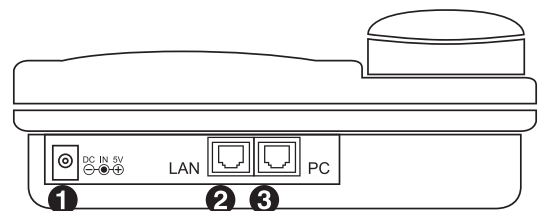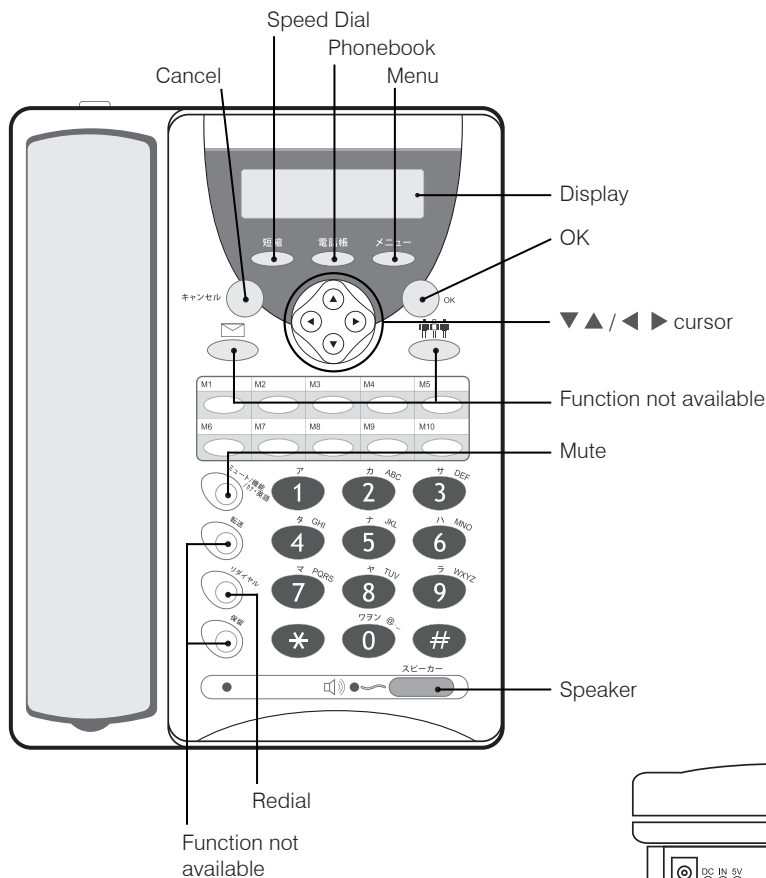

- ① 5V DC: Connect to the AC/DC power supply
- ② LAN: Connect to the modem or router
- ③ PC: Connect to the PC

TERMINAL FUNCTIONS

FUNCTIONS	PROCEDURE
<p>Changing the display language</p>	<ol style="list-style-type: none"> 1. Press the ミュート/機能/カナ・英数 (mute) button. 2. Press 1. 3. In the display it will show Language/ゲンゴ. 4. With ◀ ▶ select ニホンゴ (Japanese) or English. 5. Press OK.
<p>Placing a call</p>	<ol style="list-style-type: none"> 1. Dial the desired number. 2. Pick up the receiver, or 3. Press the スピーカー (speaker) button. <p>To redial the last number called:</p> <ol style="list-style-type: none"> 1. Press the リダイヤル (redial) button. 2. When the number appears in the display 3. Press the OK button and pick up the receiver, or 4. Press the スピーカー (speaker) button.
<p>Phonebook functions (電話帳)</p>	<p>To save a phone number:</p> <ol style="list-style-type: none"> 1. Press the 電話帳 (phonebook) button until Name shows in the display. 2. Using the phone's key pad enter the person's name and press OK. 3. Enter the phone number and press OK. 4. To confirm registration, press OK once more. <p>To cancel the procedure, press the キャンセル (cancel) button.</p> <p>To search for a phone number:</p> <ol style="list-style-type: none"> 1. Press the 電話帳 (phonebook) button. 2. With ▼ ▲ select the desired phone number. <p>To call the selected number, press the OK button and pick-up the receiver or, press the スピーカー (speaker) button.</p> <p>To edit a phone number:</p> <ol style="list-style-type: none"> 1. Press the 電話帳 (phonebook) button. 2. With ▼ ▲ select the desired phone number. 3. Press the 電話帳 (phonebook) button. 4. With ◀ ▶ select Edit. 5. Press the OK button. 6. Edit the name and/or phone number. 7. Press the OK button. 8. To confirm registration, press OK once more. <p>To cancel the procedure, press the キャンセル (cancel) button.</p>

TERMINAL FUNCTIONS

FUNCTIONS	PROCEDURE
<p>Phonebook functions (電話帳)</p>	<p>To delete a phone number:</p> <ol style="list-style-type: none"> 1. Press the 電話帳 (phonebook) button. 2. With ▼ ▲ select the desired phone number. 3. Press the 電話帳 (phonebook) button. 4. With ◀ ▶ select Delete. 5. Press the OK button. 6. To confirm deletion, press OK once more. <p>To cancel the procedure, press the キャンセル (cancel) button.</p>
<p>Speed Dial (短縮)</p>	<p>To save a phone number:</p> <ol style="list-style-type: none"> 1. Press the 短縮 (speed dial) button. 2. Enter the Speed Dial number that you wish to save the phone number to (between 00 to 09). 3. Press the OK button. 4. Enter the destination phone number. 5. Press the OK button.
	<p>To place a call using Speed Dial:</p> <ol style="list-style-type: none"> 1. Press the * (asterisk) key and Speed Dial number. 2. Press the OK button. 3. Pick up the receiver or press the スピーカー (speaker) button.
	<p>To edit a phone number:</p> <ol style="list-style-type: none"> 1. Press the 短縮 (speed dial) button. 2. Enter the Speed Dial number you wish to edit, i.e.: (between 00 to 09) 3. Press the OK button. 4. Delete the phone number by pressing ◀. 5. Enter the new phone number. 6. Press the OK button.
<p>Calling History</p>	<p>To check outgoing calls:</p> <ol style="list-style-type: none"> 1. Press the リダイヤル (redial) button. 2. With ▼ ▲ check the outgoing calls. 3. With ◀ ▶ check call dates and time. <p>Note: press the OK button if you wish to redial the number.</p>
	<p>To check incoming calls:</p> <ol style="list-style-type: none"> 1. Press the リダイヤル (redial) button twice. 2. With ▼ ▲ check the incoming calls. 3. With ◀ ▶ check call dates and time. <p>Note: press the OK button if you wish to redial the number.</p>

TERMINAL FUNCTIONS

FUNCTIONS	PROCEDURE
Volume Adjustment	Handset volume: Pick-up the receiver and press ▼ ▲ to adjust the volume.
	Speaker volume: 1. Press the スピーカー (speaker) button. 2. Press ▼ ▲ to adjust the volume.
	Ringer volume: With the receiver down, press ▼ ▲ to adjust the volume.
Ringtone	1. Press the メニュー (menu) button. 2. Enter 1234 and press the OK button. 3. With ▲ select Ringing Type. 4. With ◀ ▶ select the ringtone type and press the メニュー (menu) button. 5. Press the OK button.
Mute (ミュート/機能/カナ・英数)	While in a call press the ミュート/機能/カナ・英数 (mute) button. Press again to unmute.

SETTING UP THE TERMINAL

Setup will depend on other devices already connected to your internet connection, as well as where the service provider information (PPPoE) is registered.


PPPoE (user authentication for the internet connection) must be registered in the router or modem (with built-in router). For setup you need the information from your internet provider (user name and password). If you do not have a modem/router, setup PPPoE in the FLIP Phone ACT (see page 12).

After setting up the FLIP Phone terminal, wait a few minutes for the system to stabilize.

Double check which illustration shows your setup.


Case A: ADSL modem with built-in router

BEFORE

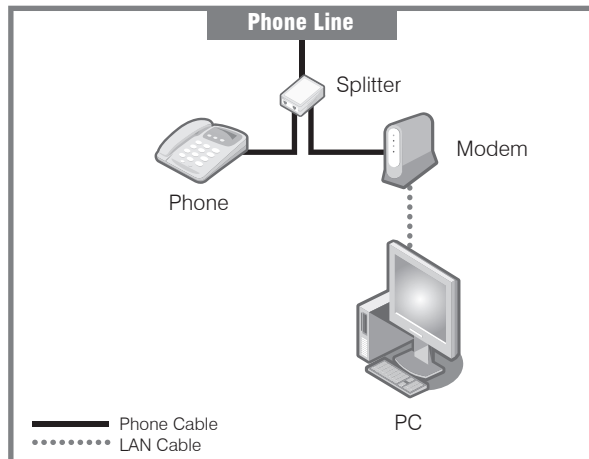


Before and after setting up the FLIP Phone ACT.

AFTER

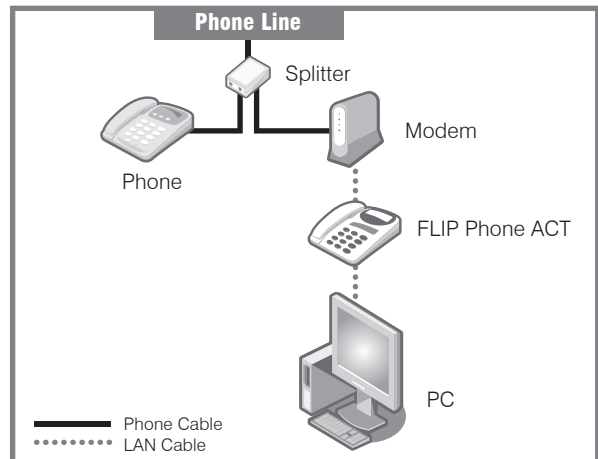


Case B: ADSL modem and router separately

BEFORE

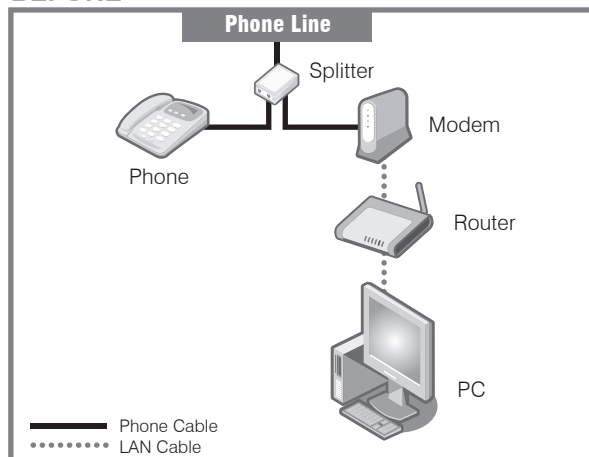


Before and after setting up the FLIP Phone ACT.

AFTER

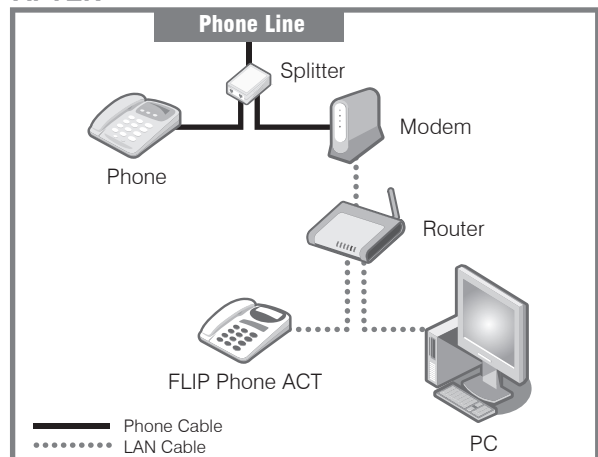


Case C: Optical fiber/hikari connection and modem (with built-in router)

BEFORE

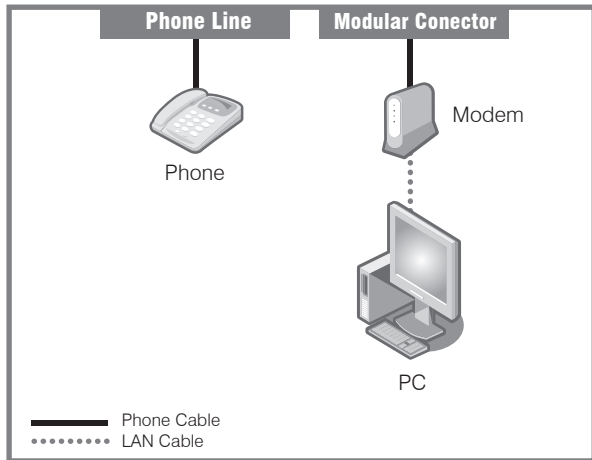


AFTER

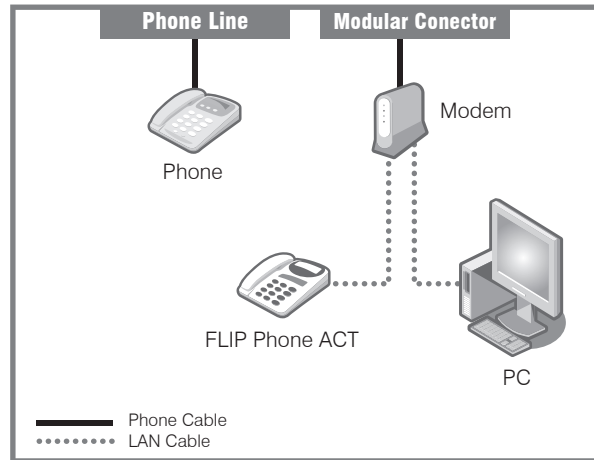


Before and after setting up the FLiP Phone ACT.

Case D: Optical fiber/hikari connection with modem and router separate

BEFORE

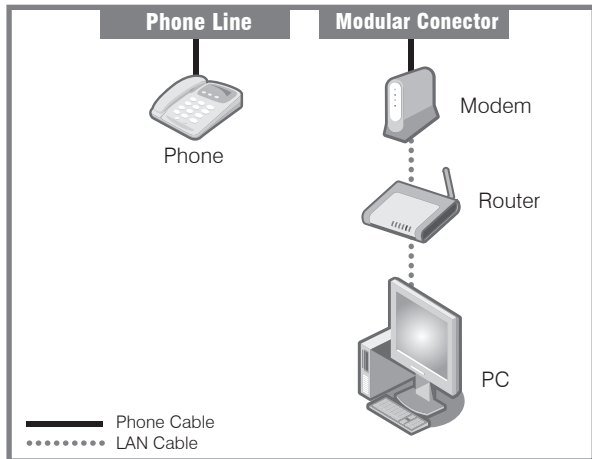


AFTER

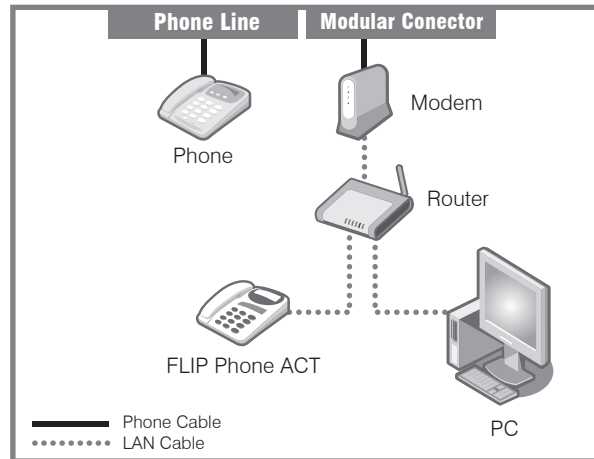


Before and after setting up the FLiP Phone ACT.

Case E: Optical fiber/hikari connection, IP phone with modem and router separate

BEFORE

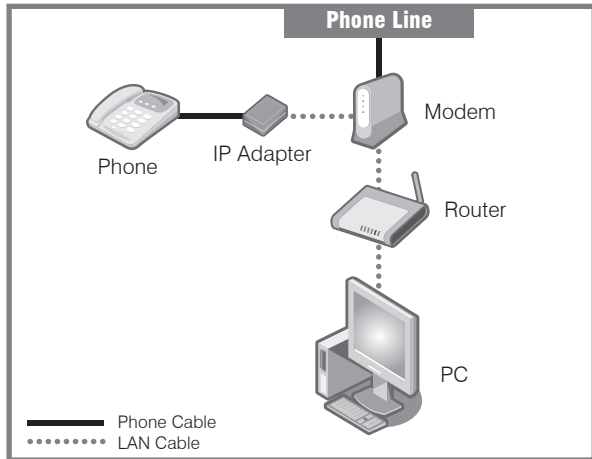

AFTER

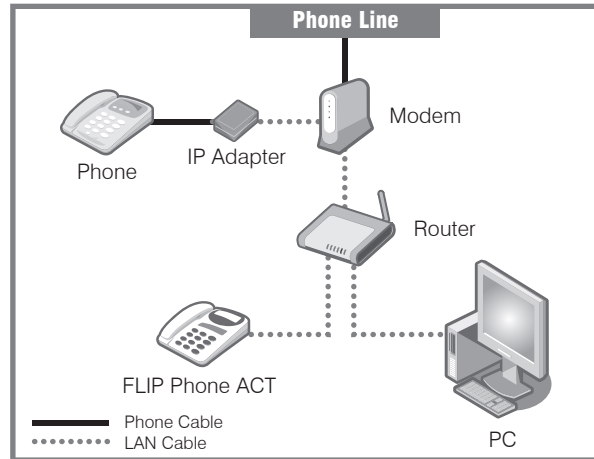

Before and after setting up the FLiP Phone ACT.

Case F: ADSL modem (without router)


In this case, the FLIP Phone ACT has to have the same PPPoE settings as the PC.

Important Note


NTT FLET'S service allows only two simultaneous sessions at a time. If you are already using two PCs connected through a switching hub you will need to change it to a router with your PPPoE settings.

Step 1) Connect the FLIP Phone ACT as shown below.

BEFORE

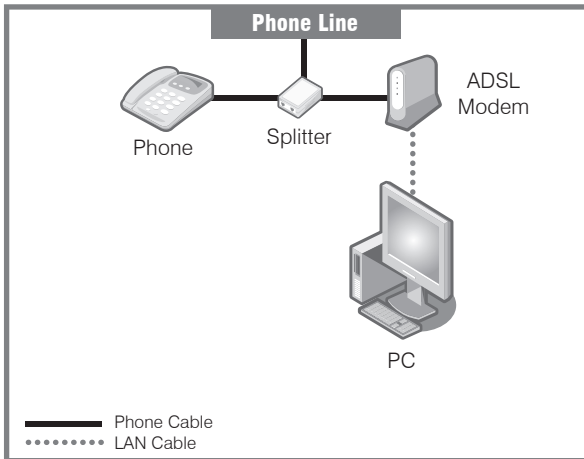

AFTER

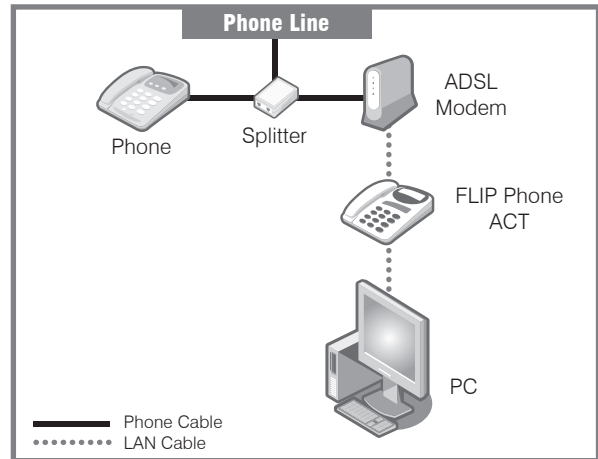

Step 2) Setup PPPoE in the FLIP Phone ACT with following the procedure below:

1. Press the \times メニュー (menu) button.
2. Enter 1234 and press the OK button.
3. With ▼ select ADSL Dial Up.
4. With ◀ ▶ change from Disable to Enable.
5. With ▼ select ADSL ID and enter the service provider's user name.
6. With ▼ select ADSL password and enter the service provider's password.
7. Press the \times メニュー (menu) button.
8. Press the OK button.

ADDENDUM I

If the PC is connected to the FLIP Terminal and has no internet connection, it will be necessary to setup DHCP in the PC.

Setting up DHCP in the PC

DHCP (Dynamic Host Configuration Protocol) is a client/server protocol that automatically provides an Internet Protocol (IP) host with its IP address and other related configuration information such as the subnet mask and default gateway.

In the case of FLIP, it will help the FLIP terminal to provide the necessary information to your computer so you may use the internet normally by connecting your computer to the FLIP terminal's PC port.

Windows XP

1. Click on the Start button > Control Panel > Network Connections icon.
2. Right click on the Local Area Connection icon.
3. Select Properties from the menu.
4. Double click on the Internet Protocol (TCP/IP) entry.
5. Click on Obtain an IP address automatically.
6. Click on Obtain DNS server address automatically.
7. Click OK and restart the computer.

Windows Vista

1. Click on the Start Orb > Control Panel > Network and Internet.
2. Click on Network and Sharing Center.
3. In the Network and Sharing Center look along the left pane and click Manage Network Connections.
4. Right click on the Local Area Connection icon.
5. Select Properties from the menu.
6. Click on Obtain an IP address automatically.
7. Click on Obtain DNS server address automatically.
8. Click OK and restart the computer.

For further information on DHCP settings, please refer to the operation system's Help.